

PARTS LIST

ITEM	PART	DESCRIPTION	QTY
1	Wall Anchor	Wall Plug	12
2	SL-CAP1503	Capital Wall Jamb	2
3	CA-CAP Jamb Bumpers	Wall Jamb Bumpers	12
4	N/A	ST 3.5x12 Screws	12
5	N/A	ST 4x45 Screws	6
6	CA-CAP952	Capital Anti-Jamb	4
7	CA-CAP 501E1x19	Roller	4
8	SL-CAP 1501	Capital Header	1
9		Glass Panel	2
10	CA-CAP-TB	Towel Bar	1
12	CA-CAP Bottom Bumpers	Bottom Bumpers	2
13	CA-CAP920	Capital Center Guide	1
14	SL-CAP1502	Capital Curb	1
15	N/A	Screw Cap	8
16	N/A	ST 4x30 Screws	2
17	N/A	ST 5x30 Screws	2
18a	CA-CAPC4101W	Capital Wall Clip	2
18b	CA-CAPC4101WR	Capital Wall Clip Revised	2

NOTE: Threads on rollers and anti-jumps require thread locker, sold separately. See instruction 4.



When ordering repair parts, please provide the following information:

1. Model Number
2. Part Number
3. Part Description
4. Finish Color

Required Tools:

To install your shower enclosure, you will need the following:

- Level
- #31 Drill Bit
- 3/16" Carbide Drill Bit (for tile walls)
- Phillips Screwdriver
- Silicone
- Hammer
- Tape Measure

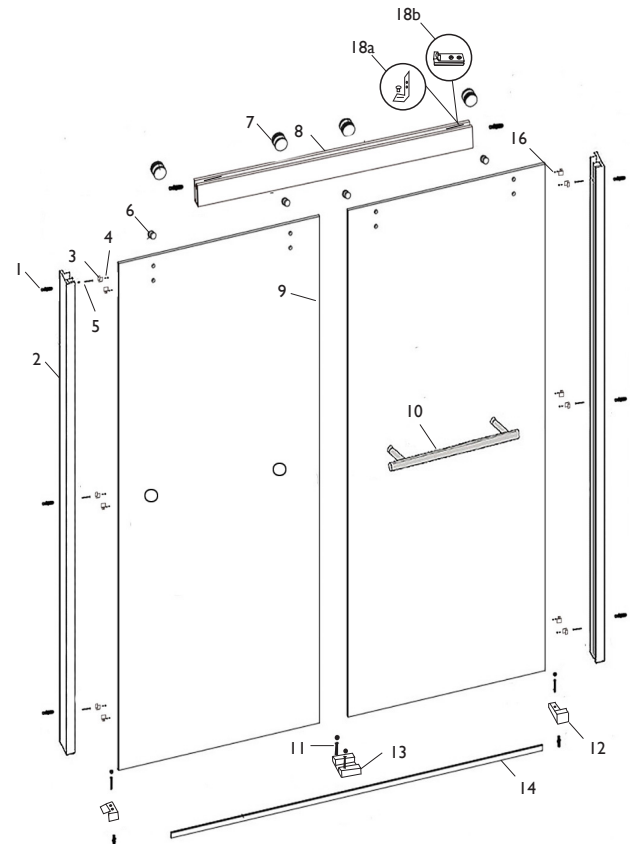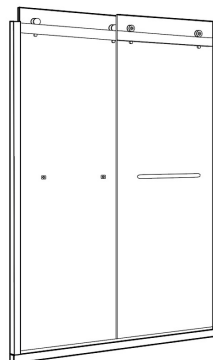

STEP 1

(See Figure 1). Ensure unit is level (1). Measure the position of wall jambs and mark and drill 1/4" holes accordingly. Insert anchors (3). Place the Capital curb onto shower base (5). Make sure wall jambs and curb are plumb.

STEP 2

(See Figure 2). Place header in wall jamb slot (1). Measure and mark position of wall clip, then mount with screws (2).
Note: Revised header clip may be included based on manufacturer date (2a.)

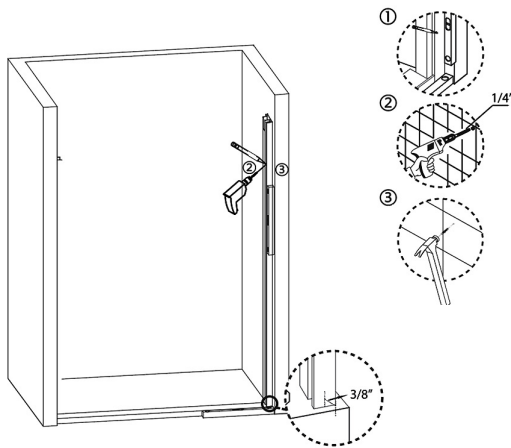


FIGURE 1

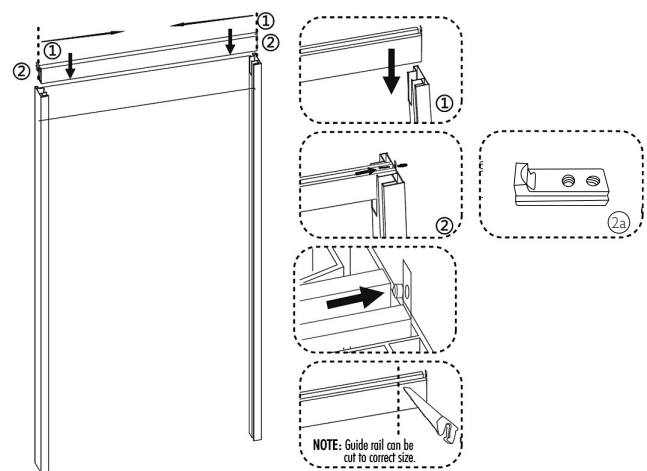


FIGURE 2

STEP 3

(See Figure 3). Install jamb bumpers then tighten the screws (1).

STEP 4

(See Figure 4). Install rollers and anti-jumping blocks (1) (2). Install the bottom bumpers on the wall jambs (3).
NOTE: Thread locker (Loctite® brand or similar) is REQUIRED for all threads on rollers (part #7) and anti-jumps (part #6). Be sure to follow the manufacturers recommendations for cure times when making final adjustments. Thread locker is NOT included in the kit but is readily available at many hardware stores and from many online retailers.

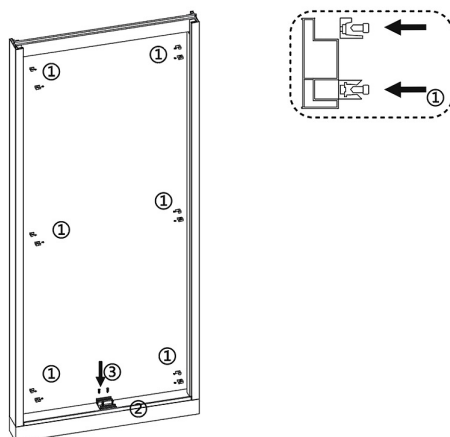


FIGURE 3

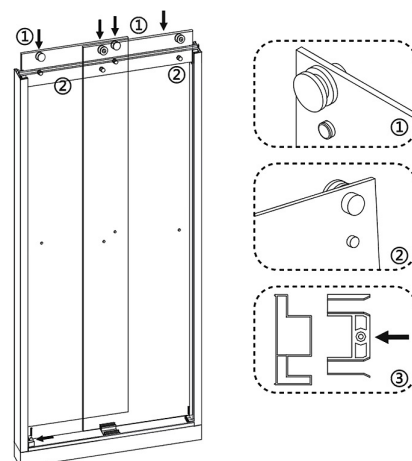


FIGURE 4

STEP 5

(See Figure 5). Install towel bars (1). Adjust roller until glass panel moves smoothly (2).

STEP 6

(See Figure 6). Apply good quality silicone sealant. Clean all joints areas as recommended.

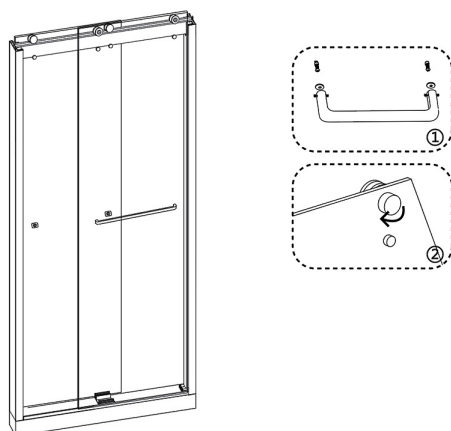


FIGURE 5

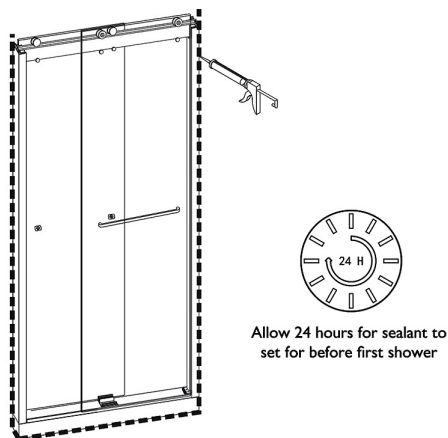


FIGURE 6