

## PARTS LIST

| ITEM | PART              | DESCRIPTION                    | QTY |
|------|-------------------|--------------------------------|-----|
| 1    | ZTE-2603          | Wall jambs                     | 2   |
| 2    | ZV-935            | Wall Anchors                   | 6   |
| 3    | #8X1-1/4"         | #8x 1-1/4" Screws              | 6   |
| 4    | HG-924            | Door Bumpers                   | 2   |
| 4A   | HG-926            | Bottom Bumpers                 | 1   |
| 5    | 6-32X1/2"         | 6-32 x 1/2" Screws             | 2   |
| 6    | ZTE-2622          | Bottom Still                   | 1   |
| 7    | HG-920            | Center Guide - 3"              | 1   |
| 8    | ZTE-2602          | Header                         | 1   |
| 9    | CHG-TB            | Tubular Towel Bar              | 1   |
| 10   | CHG-KSM           | Tubular Inside Pull            | 1   |
| 11   | FIG F CAP         | Towel Bars/Pull Fastener       | 3   |
| 12   | 3/4" Nylon Washer | Pull Washer                    | 6   |
| 13   | 1/4" Nylon Sleeve | 1/4" Nylon Towel Bar Sleeve    | 3   |
| 14   | #6X3/8            | #6 x 3/8" Screws               | 2   |
| 15   | ZTE-1231          | Roller Bracket Assembly        | 4   |
| 16   |                   | Inside Glass Panel             | 1   |
| 17   |                   | Outside Glass Panel            | 1   |
| 18   | ZV-960            | Door Guide Vinyl with ZTE-2622 | 1   |
| 19   | ZV-952            | Snap-In Retainer               | 2   |




When ordering repair parts, please provide the following information:

1. Model Number
2. Part Number
3. Part Description
4. Finish Color

### Required Tools:

To install your shower enclosure, you will need the following:

- Level
- #31 Drill Bit
- 3/16" Carbide Drill Bit (for tile walls)
- Phillips Screwdriver
- Silicone
- Hack Saw
- 1/4" Box End Wrench

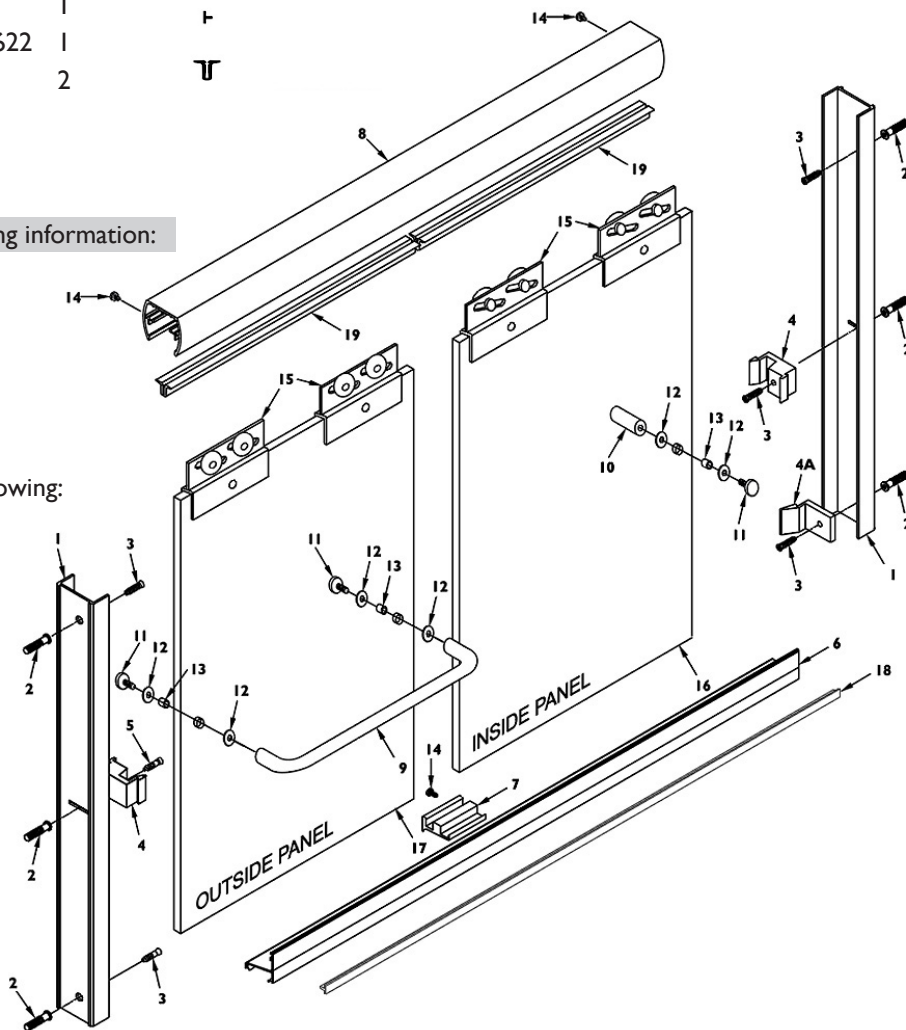

## INSTRUCTIONS:

**Note: Apply a bead of silicone (GE 1200) into the open channel of roller bracket (15) before attaching to glass. After placing roller brackets on the glass, insert screw through bracket and glass into female end. Tighten screw until metal is depressed 1/32". Allow silicone to cure for 12 hours before hanging panels.**

1. Set wall jambs (1) in place on walls, centering bottom of jambs on rim of tub. Hold plumb and mark walls for screw holes.
2. Remove and drill 3/16" diameter holes in walls (use a carbide tipped drill bit for tiles walls). Insert plastic wall anchors (2) into holes. Silicone where the wall meets the rim of the tub to seal the bottom of jamb. On the shower head side of enclosure, secure door center bumper (4) and bottom bumper (4a) with #8 x 1-1/4" screws (3) and top of wall jamb with another #8 x 1-1/4" screw (3). On the other side, secure door center bumper (4) with a #8 x 1-1/4" screw (3) and top and bottom of wall jamb with two more #8 x 1-1/4" screws (3).  
 NOTE: Glass panels close into the recessed portion of the bumpers. The recess is toward the inside of the tub on the shower head side, and towards the outside on the other jamb.


3. Cut sill (6) to fit opening between jambs. Run a bead of silicone full length to the underside of sill (See Figure 2) and apply silicone to inside of jamb where jamb meets tub. On the inside of jamb, run an 1/4" bead of silicone 1-1/4" up the outside leg of each wall jamb (See Figure 2). Set sill in place and press firmly to rim of tub. Wipe off any excess silicone before curing. Use tape to hold in place until silicone has set.

4. Cut header (8) 1/32" to 1/16" less than opening width and set in place.


5. To set slider glass in place, hold inside slider inside of tub shower pan, insert rollers up into header and lower into place. The inside slider glass has only one hole for the inside pull handle (10) and will close against the wall jamb on the shower head side. Next, insert lower end of outside slider in front of inside slider by pushing lower ends far enough in to allow clearance on inside edge of tub or pan. Avoid roller brackets to roller bracket contact while lifting panel into place. The outside slider will close against the jamb opposite the shower head.

6. Place center guide (7) in the middle of the sill (See Figure 2). Make sure the center guide is hooked into position on the sill. Attach center guide with #6 x 3/8" screw (14).

7. Close panels and adjust to align the vertical edge of panel with jamb. Using a 1/4" box-end wrench, loosen the screws on the rollers, but don't remove completely. When screws are loose, adjust panel by sliding the screw into the slot. NOTE: When screws are loose be sure to support panel so it doesn't fall and break. Adjust the inside slider as low as possible to reduce the gap between bottom of slider and sill taking care that the glass does not drag on the track of center guide.

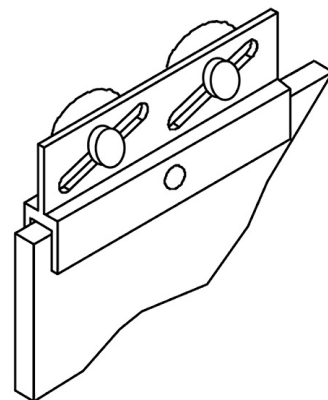


**FIGURE 1**

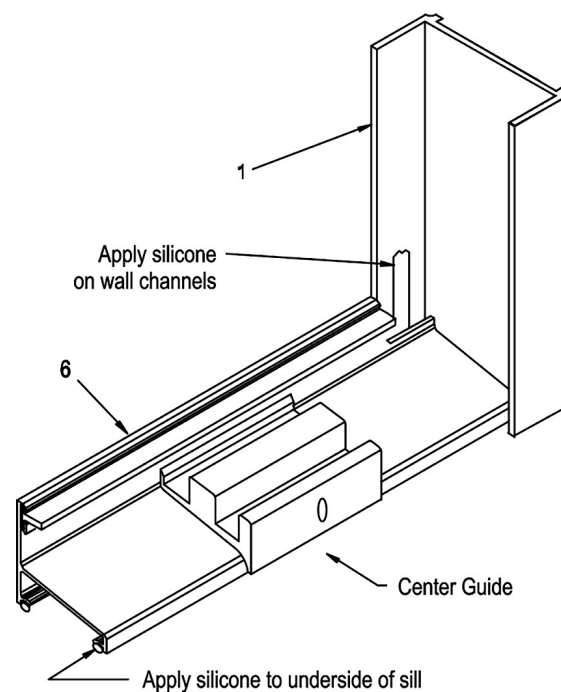


**FIGURE 2**

8. To install towel bar (9), first insert washer (12) and nylon sleeve (13) onto the towel bar fastener (11). Insert the fastener screw through the hole in the glass and slide on the other washer (12). Then screw the fastener into one end of the towel bar (9). Repeat for the other end of the towel bar (9), and for the pull (10). (See Figure 3).
9. Center hole in jamb is slotted to allow adjusting of jamb to compensate for bowed glass. After installing hardware, roll both panels into jamb on one side. If edge of glass hits on edge of jamb, loosen center screw and adjust jamb accordingly. Repeat on opposite side.
10. From inside of unit, drill #31 holes through headers into wall jambs, 1 1/16" from bottom of header. Secure header to wall jambs with two #6 x 3/8" screws (14).
11. After doors have been installed and rollers have been adjusted install the two snap retainers (19) onto the upper center rib inside the header. Slide both doors to one side, starting at the "open" wall, push the retainer into place until the "snap" is heard toward the end. Slide the doors to the opposite side and repeat process starting from the opposite wall. NOTE: One snap retainer will need to be trimmed to fit; retainers will not overlap but need to butt together. Refer to Figure 4 for cut away view of installation.
12. Silicone inside of shower where jambs meet walls and sill meets rim of tub.

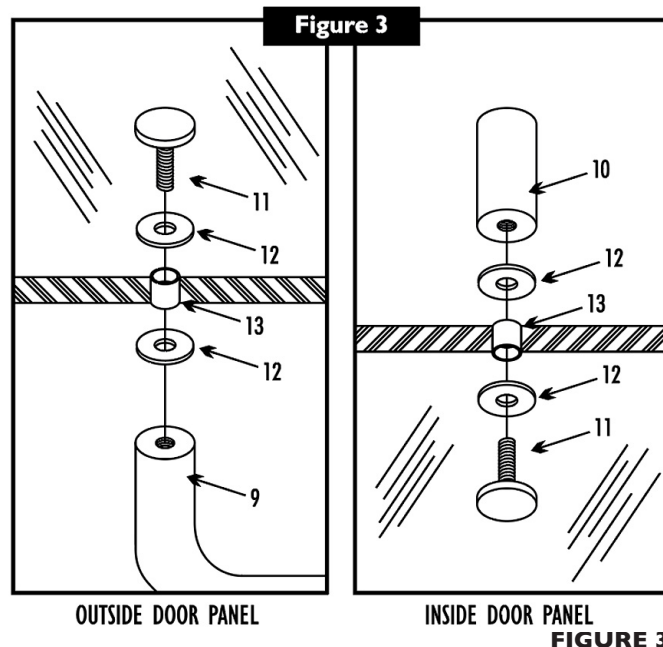

**FIGURE 3**

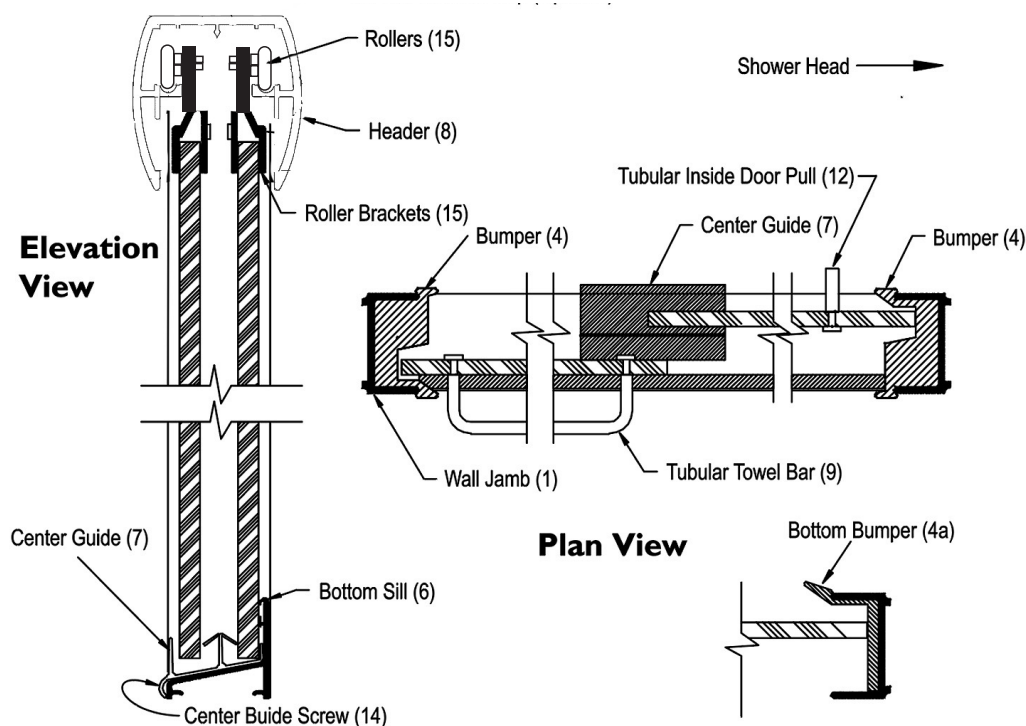

**FIGURE 4**

## FRAMELESS ENCLOSURES:

Model HGTE Euro Tub Enclosure (for 3/8" glass)

Model HGSE Euro Shower Enclosure (for 3/8" glass)

| Model # | Width      | Height  | Max. Glass Size   |
|---------|------------|---------|-------------------|
| HGTE-60 | 42" to 60" | 57-1/2" | 30" x 55" w/holes |
| HGTE-66 | 60" to 66" | 57-1/2" | 33" x 55" w/holes |
| HGTE-72 | 66" to 72" | 57-1/2" | 36" x 55" w/holes |
| HGSE-48 | 42" to 48" | 70-1/2" | 24" x 68" w/holes |
| HGSE-60 | 54" to 60" | 70-1/2" | 30" x 68" w/holes |
| HGSE-66 | 60" to 66" | 70-1/2" | 33" x 68" w/holes |
| HGSE-72 | 66" to 72" | 70-1/2" | 36" x 68" w/holes |

## BREAKDOWN CHART FOR SPECIAL HEIGHT AND WIDTH HGTE & HGSE UNITS:

| QTY. | Part# & Description   | How to arrive at measurement                |
|------|-----------------------|---------------------------------------------|
| 1    | ZTE-2602 Header       | Unit width minus 1/16"                      |
| 2    | ZTE-2603 Side Jambs   | Unit height minus 1-1/4"                    |
| 1    | CHG-TB Towel Bars     | Centered on Glass (see instructions below)* |
| 1    | CHG-KSM Knob          | Centered on Glass (see instructions below)* |
| 1    | ZTE-2622 Bottom Track | Unit width minus 7/16"                      |

### Glass

|   |                        |                           |
|---|------------------------|---------------------------|
|   | 3/8" Glass 1/2" holes  |                           |
| 2 | Slider width<br>height | Slider width divided by 2 |

\*Center towel bar both top and bottom and side to side.

\*Make knob on the inside lite same distance from edge as the towel bar is on the outside lite. Center from top to bottom.