



The following instructions are for a soft-close system designed for PTESE/PTETE units. Fig. C shows the installation of a shower head left orientation. If your shower head is on the right install opposite orientation.

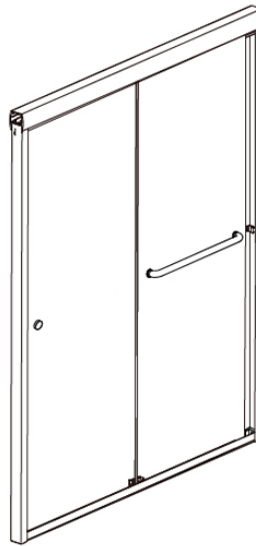

STEPS:

1. Make sure the header to be correct size before installation.
2. Use a 5/32" drill bit to drill holes in header Fig.A.
3. Assemble the soft-close stopper as pictured in Fig.A

Fig.A

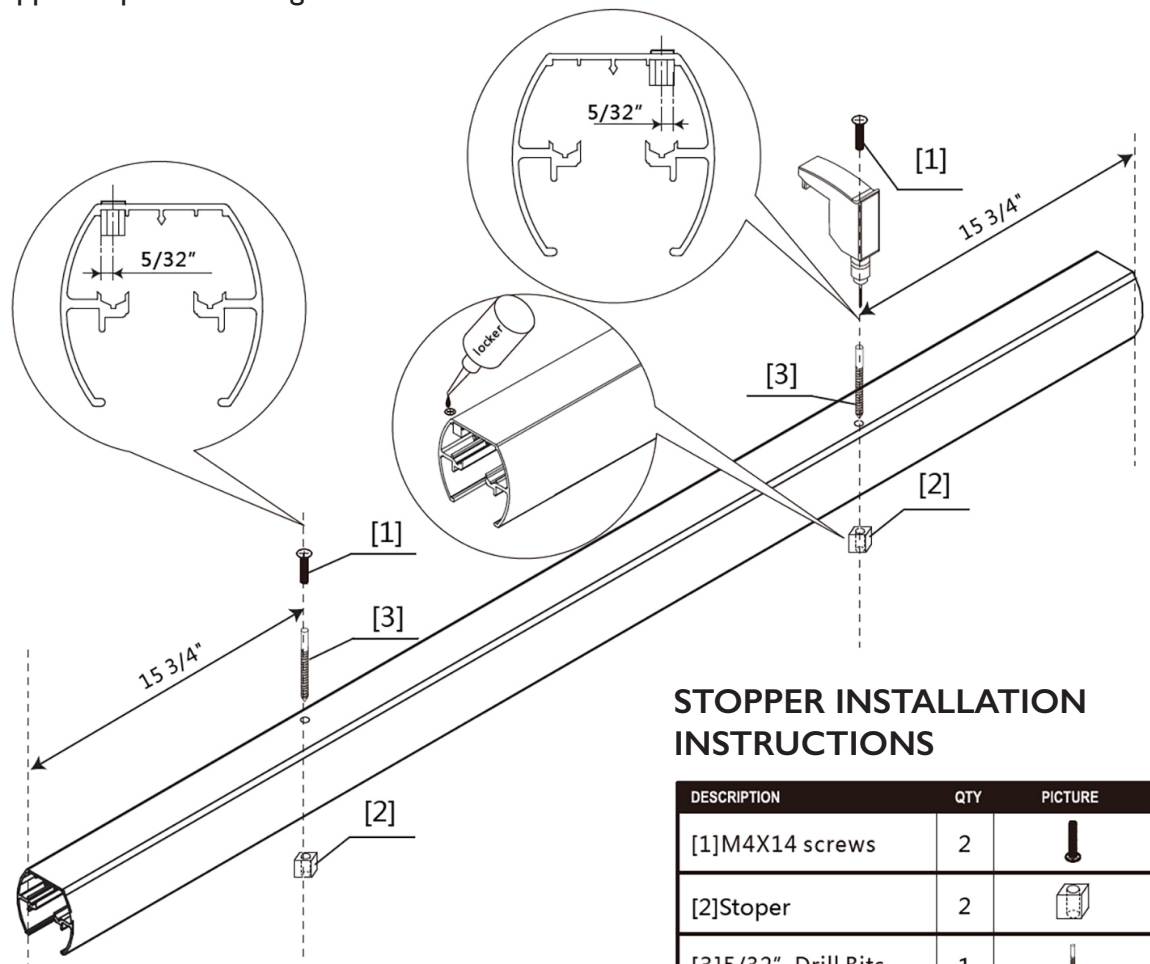


STOPPER INSTALLATION INSTRUCTIONS

DESCRIPTION	QTY	PICTURE
[1]M4X14 screws	2	
[2]Stoper	2	
[3]5/32" Drill Bits	1	

SOFT-CLOSE DEVICE INSTRUCTIONS

STEPS:

1. Apply silicone into the open channel of soft-close device.
2. Install the soft-close device on glass panels as pictured in Fig.B Make sure the soft-close device is mounted next to the roller bracket closest to wall.

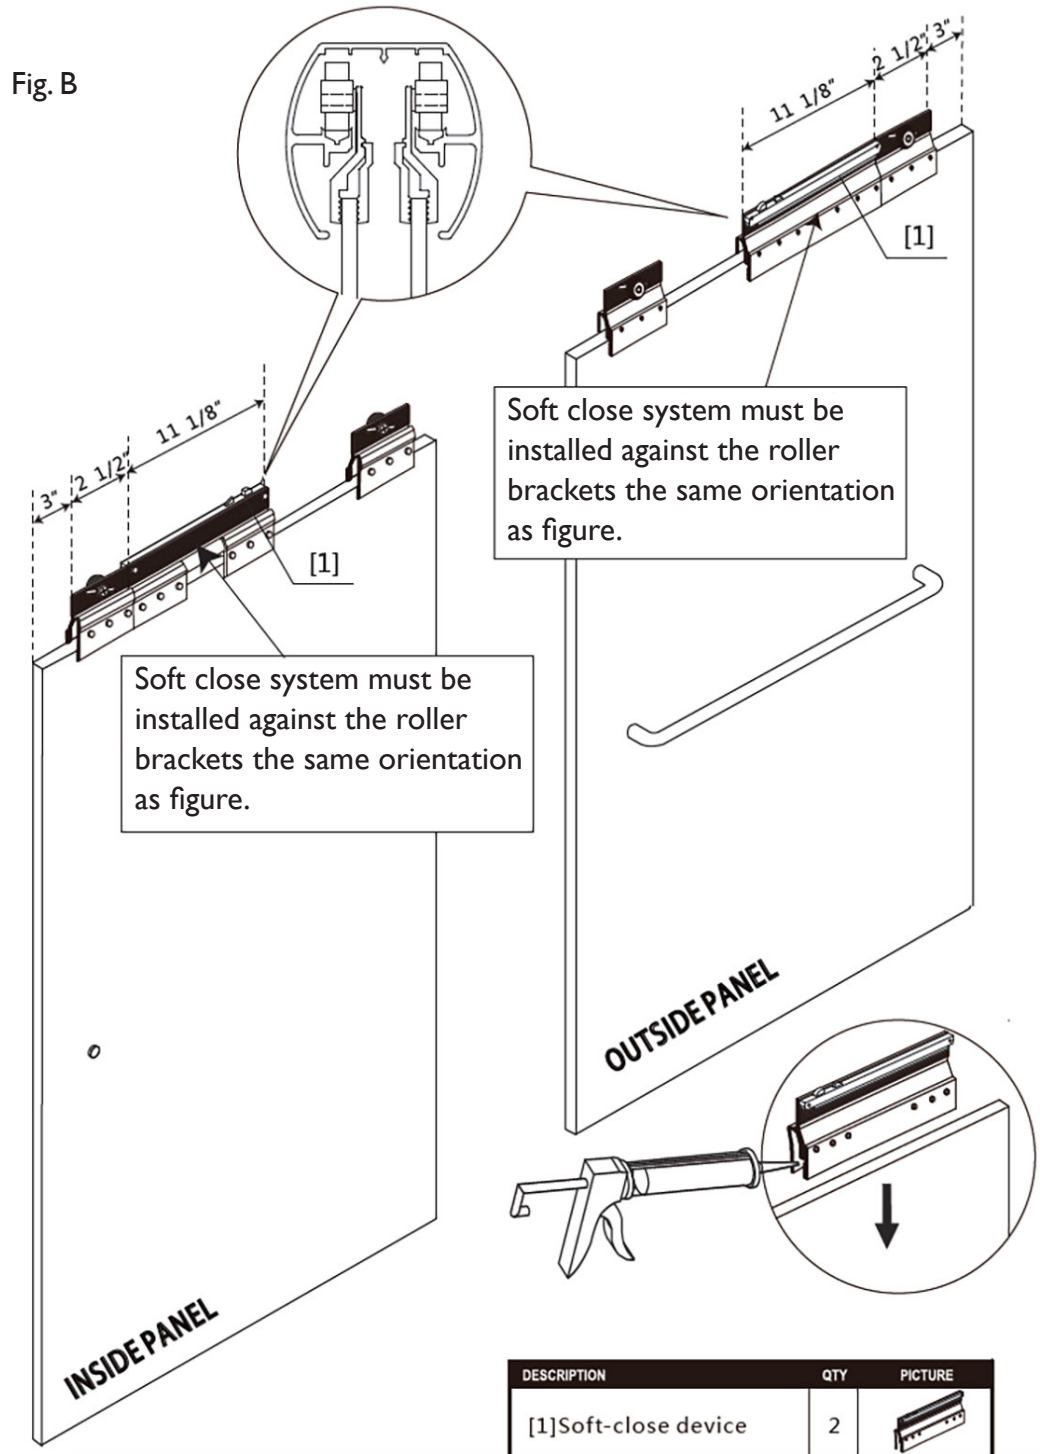

NOTE:

Soft-Close system can only be used when panel glass measures 22 1/2" or larger.