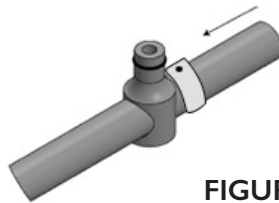


ENCLOSED ARE TWO (2) SKYLINE BAR RING STOPPERS.**TO INSTALL:**

1. Before placing the Skyline Bar into the wall-mount brackets, slide the door stopper (Part number 503F item B) onto the bar first, followed by the Skyline ring stopper (Part number SK-SKY503RS19). Ring stopper should be placed behind the door stops closest to wall on each side. See Figure 1.
- * Make sure allen set screws are loosened to keep from scratching bar and secure in place with a small piece of tape to avoid the Door stop or Ring stopper from sliding during install. *
2. Once bar is secured in wall mount brackets and door glass is in place, position the door stopper as desired, then tighten the set screw to secure.
3. Ensure the ring stopper is snug against the door stopper and tighten the set screw firmly to secure.

**FIGURE 1**